

GLOCK KPOS G2 USER MANUAL

WARNING!

Make sure your Glock is unloaded before you begin any assembly or disassembly procedures.

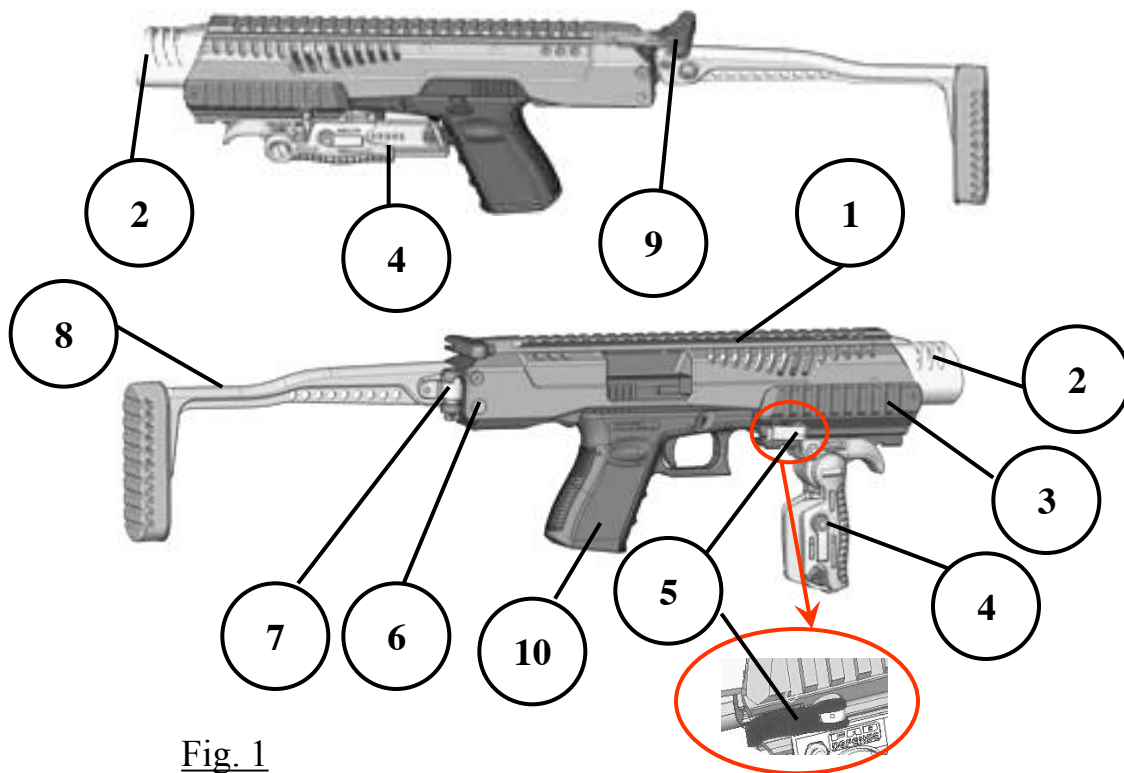


Fig. 1

Part No	Part Name
1	Receiver
2	Flash-hider
3	Handguard
4	Triggerguard Foregrip
5	Locking Lever

Part No	Part Name
6	Rear Locking Pin
7	Buttstock Hinge
8	Buttstock
9	Charging Handle
10	Glock Semiautomatic Pistol

KPOS G2 –SYSTEM SET ADJUSTMENT

The KPOS G2 is supplied factory preset for the Glock 19 Semi Automatic Pistol. When using the Glock 17 Semi Automatic Pistol the preset must be adjusted.

Adjustment of the factory preset from Glock 19 to Glock 17 is performed as follows:

1. Place the KPOS G2 upside down and pull back the Charging Handle (9) until the Slide Drawer (9.1) will be completely exposed within the KPOS G2 chassis.
2. Holding the Charging Handle (9), unscrew the Slide Drawer's Screws (9.2) and remove the Slide Drawer (Fig.2).

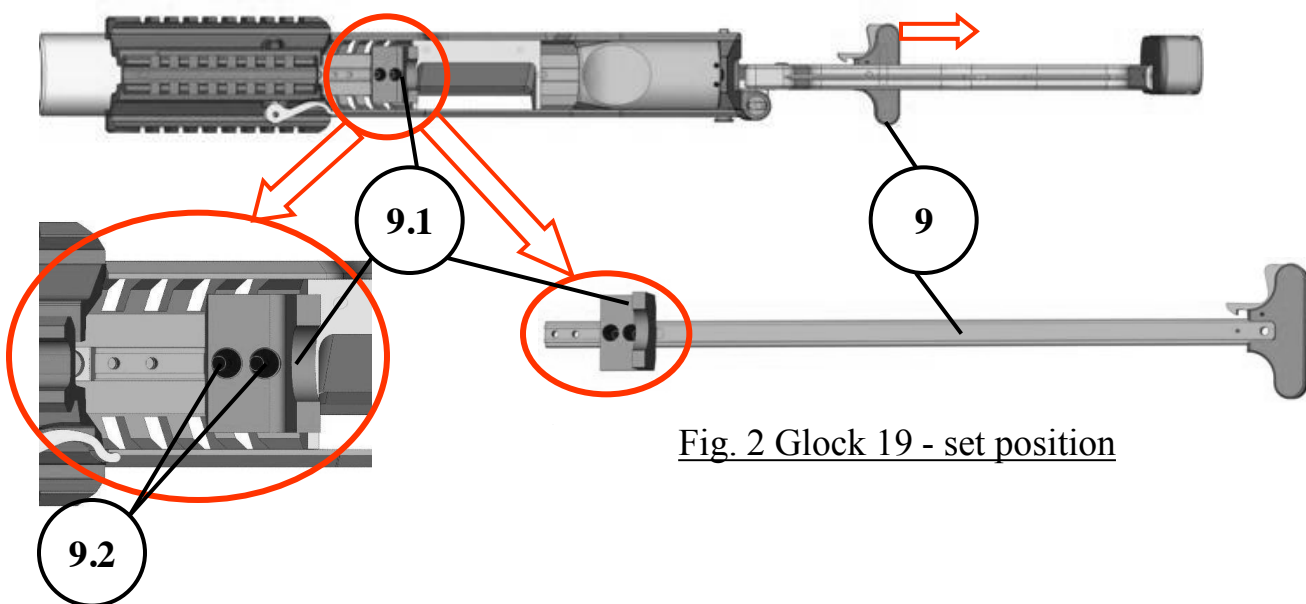


Fig. 2 Glock 19 - set position

3. Place the Slide Drawer in forward position as shown in Fig. 3 and fasten the Slide Drawer's Screws (9.2).

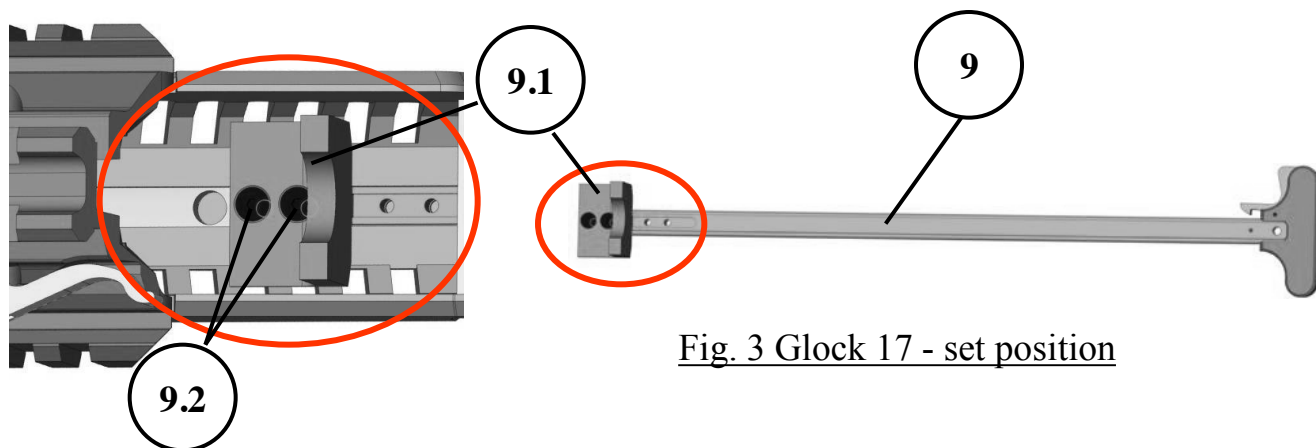


Fig. 3 Glock 17 - set position

KPOS G2 – SYSTEM ASSEMBLY

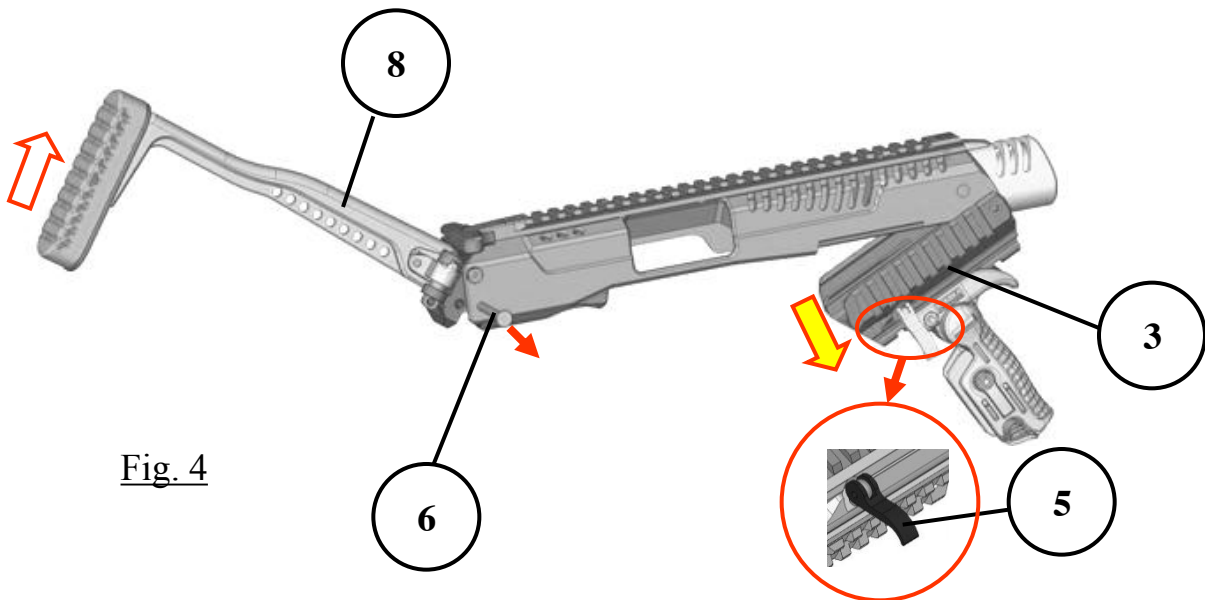


Fig. 4

Step 1. Open the Locking Lever (5) to the front and rotate to vertical position pointing down (Fig.4).

Pull out the Rear Locking Pin (6), lower the Handguard (3) and lift the Buttstock (8) up.

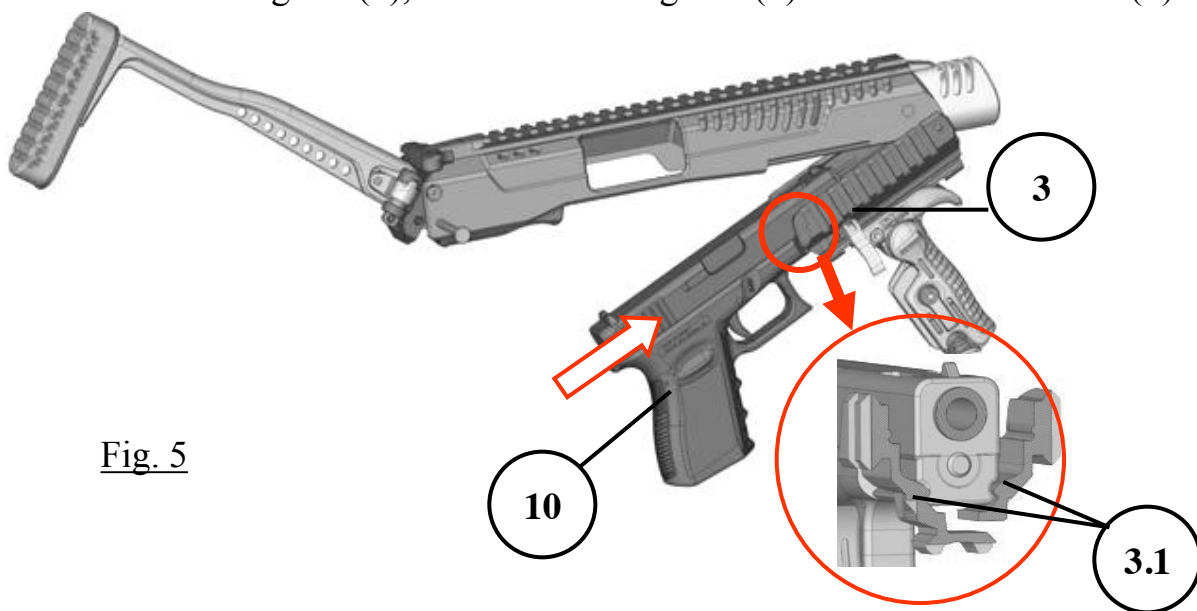


Fig. 5

Step 2. Slide your Glock Pistol (10) into the Handguard (3) so the Pistol Rail Grooves will fit securely into the Hand guard's Rails (3.1) (Fig 5).

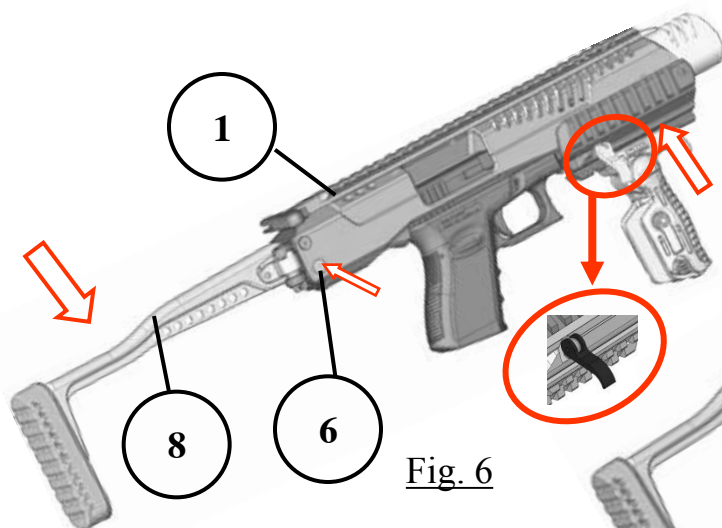


Fig. 6

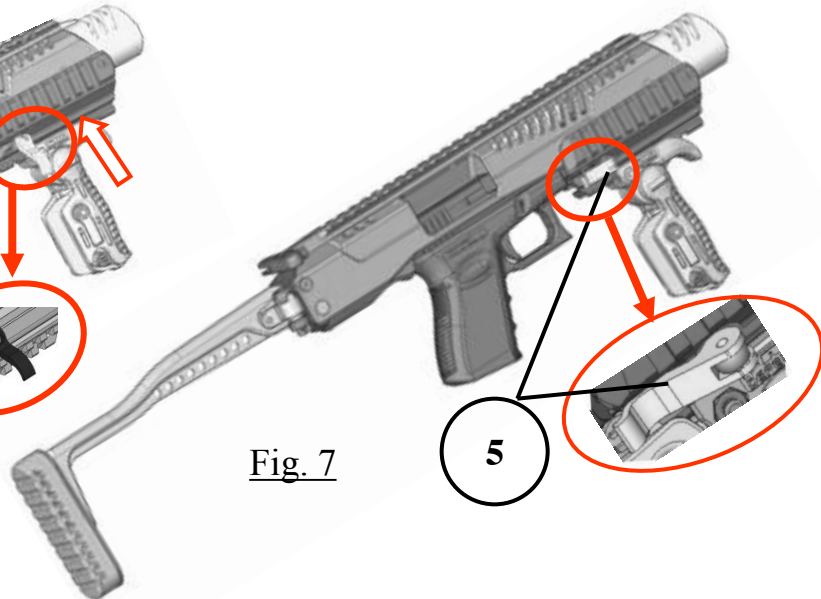


Fig. 7

Step 3. Push the Handguard (3) upwards until the pistol is positioned into the Receiver (1). Push the Buttstock (8) downwards and secure the system by inserting the Rear Locking Pin (6) back into place (Fig.6).

Fasten your Glock by closing the Locking Lever (5) in horizontal position (Fig. 7).

KPOS G2 – FOLDING/UNFOLDING THE BUTTSTOCK

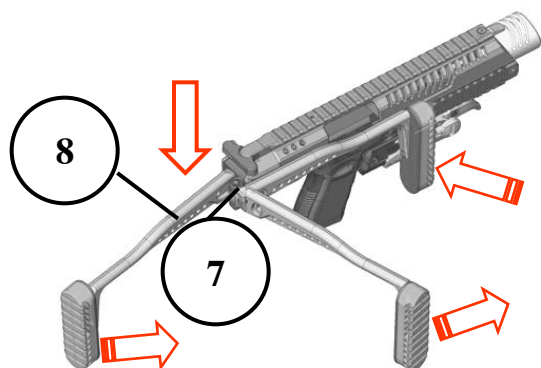


Fig. 8



Fig. 9

- To fold the Buttstock(8) apply downward pressure parallel to the Hinge (7) and rotate forward (Fig 8).
- Unfold the Buttstock by simply pulling it back (Fig. 9).

KPOS G2 – GLOCK TRIGGER SAFETY

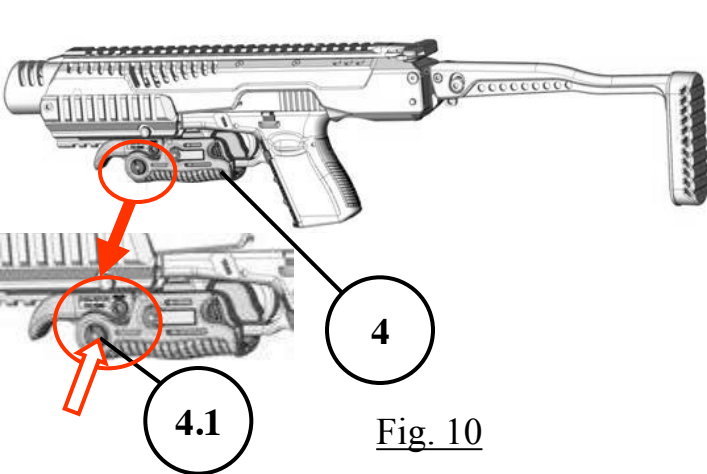


Fig. 10

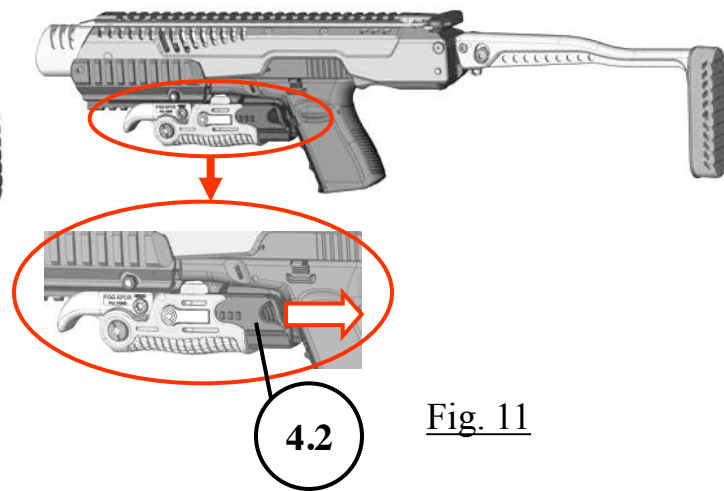


Fig. 11

Step 1. In order to secure the the Trigger, fold the Triggerguard Foregrip to horizontal position by pressing the Button (4.1) (Fig 10).

Step 2. Pull out the Triggerguard Foregrip Extension Slide (4.2) until the Trigger is fully covered (Fig 11).

KPOS G2 – GLOCK TRIGGER SAFETY - DISENGAGEMENT

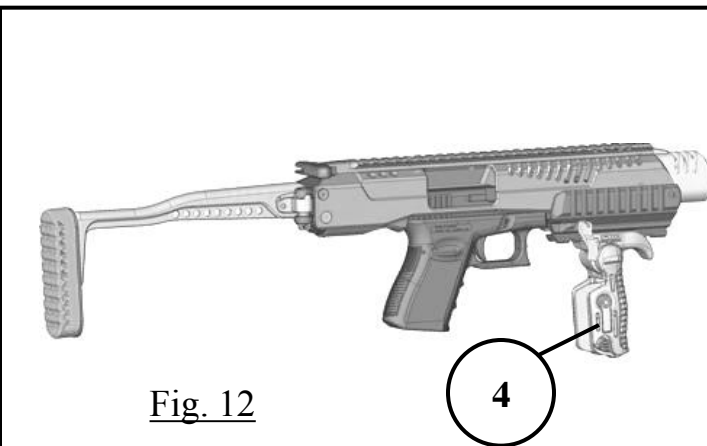


Fig. 12

Option A

Unfold the Triggerguard Foregrip (4) to vertical position (Fig.12).

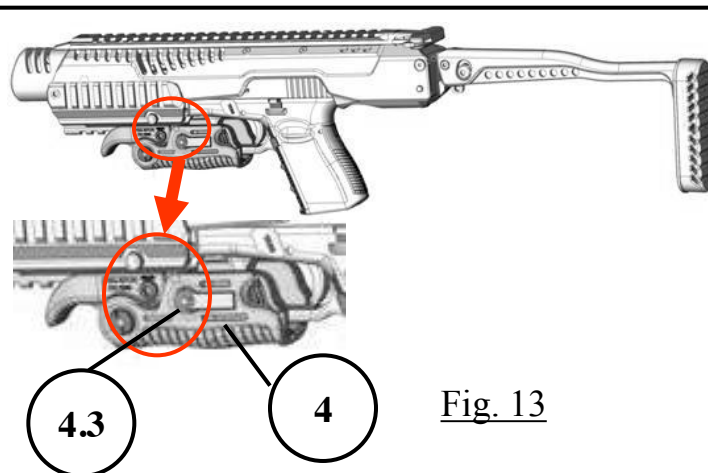


Fig. 13

Option B

Press the Release Buttons (4.3) positioned on the Triggerguard Foregrip (4). The Triggerguard Foregrip Extension Slide (4.2) will return to the initial “disengaged” position (Fig 13).

KPOS G2 – BUTTSTOCK HEIGHT ADJUSTMENT

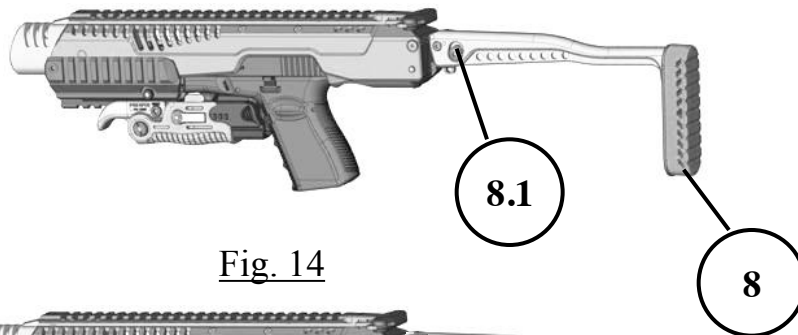


Fig. 14

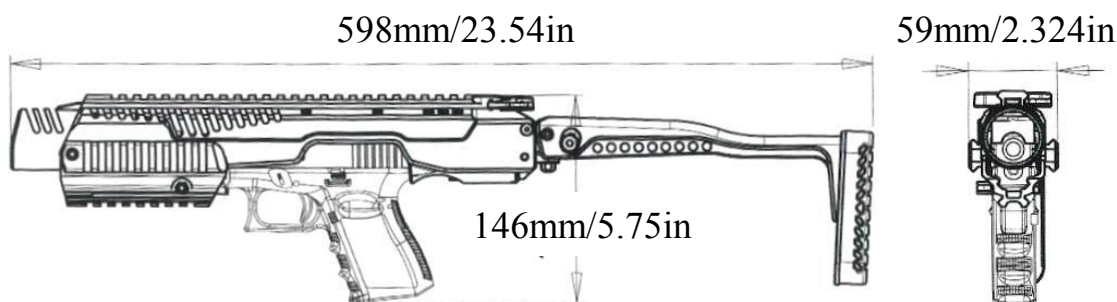


Fig. 15

Step 1. Loosen the Buttstock Screw (8.1) (Fig. 14).

Step 2. Adjust the Buttstock (8) to your desired position and then tighten the screw back into place (8.1) (Fig. 15).

KPOS G2 – DIMENSIONS WITH GLOCK 19



Weight – 960 gr/2.62 lb

Weight with Glock 19 – 1555 gr/3.43 lb

Weight with Glock 17 – 1630 gr/3.59 lb

Do not hesitate to contact your swiss FAB distributor: P1 Switzerland Ltd. - P.O. Box 114 - 8833 Samstagern - Switzerland